



UNIVERSAL KAYAK MOTOR MOUNT


Installation Instructions




Super easy to clip on and off, your kayak can change from paddle only, to motor ready in under 30 seconds. This bracket will fit most models of kayak, and is suitable for, but not limited to the following motors:

- Minn Kota, all transom mount models
- MotorGuide, all transom mount models
- Water Snake, all transom mount models
- Torqeedo, all transom mount models

FRONT ELEVATION

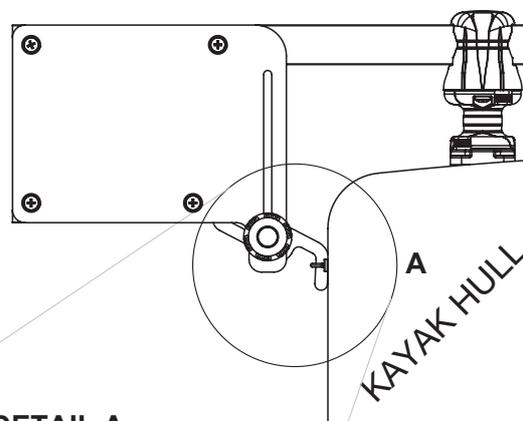

Keep plastic motor mount plate as close as possible to the hull to avoid flexing of hook

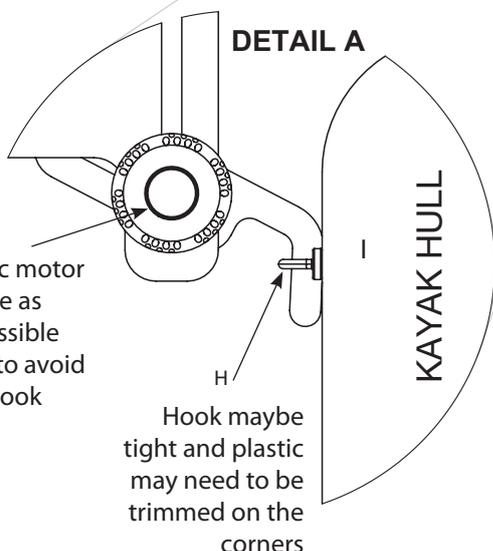

Hook maybe tight and plastic may need to be trimmed on the corners

Tools required:

No. 3 Phillips screwdriver, 10mm socket, 8mm socket, 5mm drill bit, 3mm drill bit.

Note:

We strongly recommend that you tether your motor to the kayak while in use.


Loss of motors while using the RAILBLAZA Kayak Motor Mount is not covered by warranty.




UNIVERSAL KAYAK MOTOR MOUNT

Installation Instructions

Step 1: Assemble the adjustable bracing hook with the large motormount board as shown.

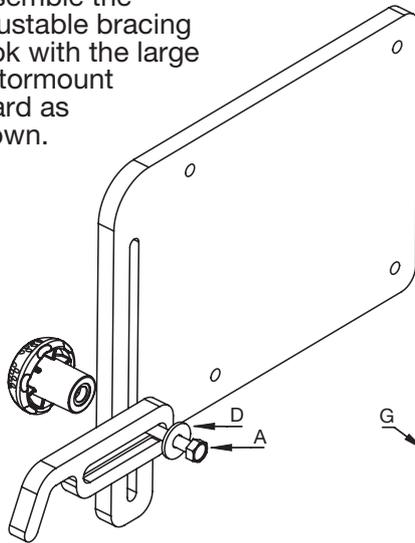

Step 2: Assemble the motormounting pads and crossbars using the fasteners indicated.

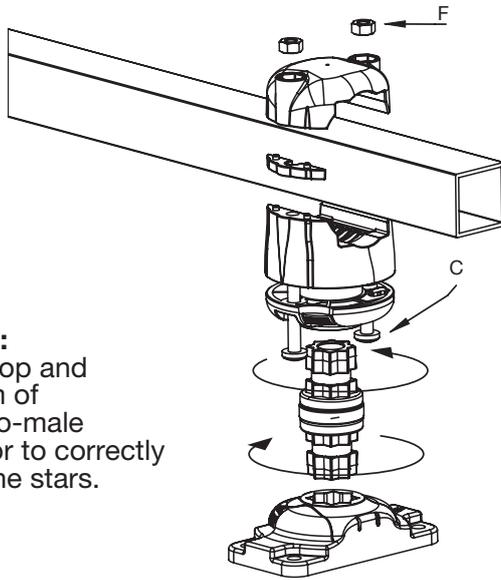

Step 3: Attach the RailMounts to the large cross-bar

Position these relative to where the mounts will be placed on your vessel.

Leave RailMounts slightly loose and tighten screws once positions are finalised.

Step 5: Twist top and bottom of male-to-male adaptor to correctly align the stars.

Step 4: Position StarPort HDs on a level plane on your vessel we recommend a minimum spacing of 300mm apart. Use fastener pack included with mounts. Rivets or rubber well nuts may also be used if required.

